

# CableData® Collector Collection Software

## Extended Captures Application Note




### Background

When using the CableData® Collector Collection Software, we recommend configuring tests to perform Extended Captures to collect more samples.

### Configuration Steps

1. Connect the CDC to your laptop.
2. Open the CDC Collection Software.
3. Click Settings in the bottom right corner.
4. Click the Standard Capture Tab.
5. Set "Event Captured Period (Seconds)" to 120.
6. Set "Maximum Waveform Count" to 500.
7. Set "Maximum Waveform Wait Period (Seconds)" to 250.
8. Click "OK" to save the settings.

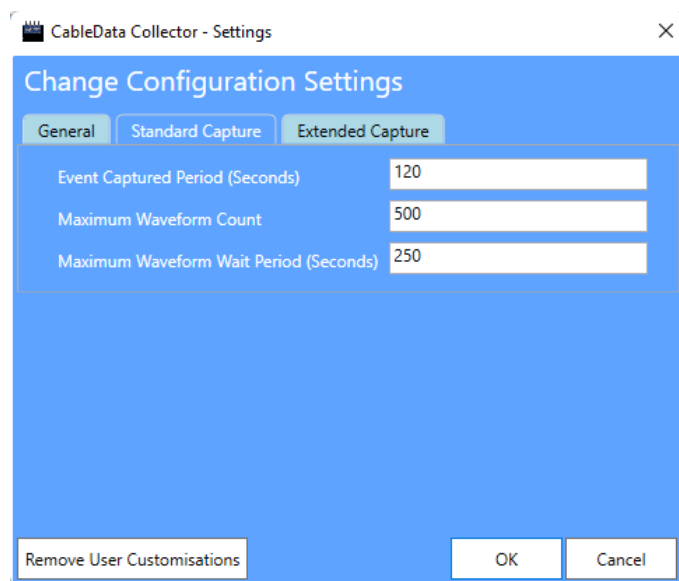

Safer, Stronger, Smarter Networks

EA Technology LLC  
400 Morris Avenue, Suite 240  
Denville, NJ 07834 USA

t (862) 261-2759  
e sales@eatechnologyusa.com  
www.eatechnologyusa.com